


INSTALLATION INSTRUCTIONS FOR EJS *ALL ACTIVE* ELECTRONIC JAMB MOUNT SWITCH

Locate template on jamb.


Centre punch and drill
3 holes with 1/8" bit

Enlarge 1 hole with
3/8" to 1/2" bit
as required

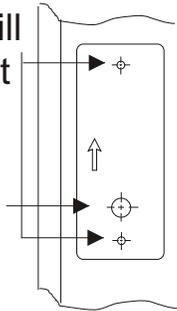


1

With 1/4" nut driver, drive in
self tapping screws.
Use back of tightening tool
as a stop. Then back off
screws 1/3 of a turn.

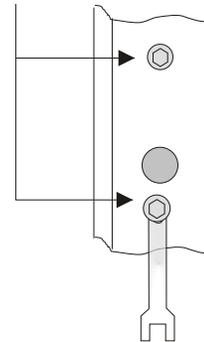


2

Connect the wires and
then slide the switch
onto the screws.

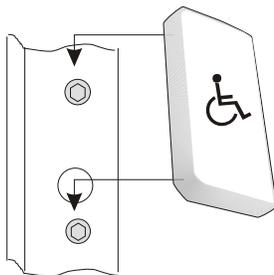

3

Lightly tighten top and
bottom screws

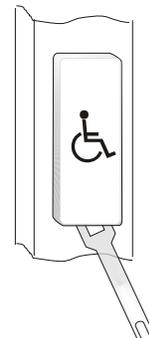

4

We recommend leaving a tightening tool
inside the door header for the next
person that needs to remove the switch.